



FOR THESE CLIP-ON SADDLE TYPES:


2389

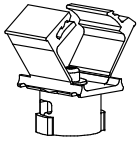


2390

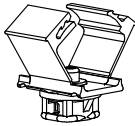


2385

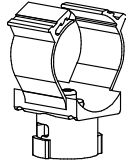


2898

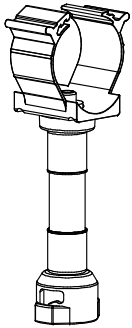


2388

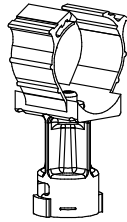


2386

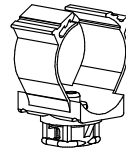

FIRST SNAP POSITION

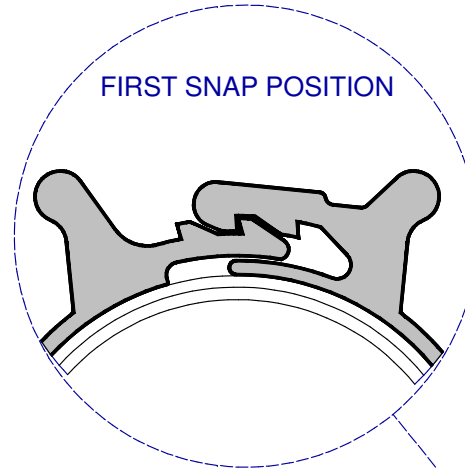


①

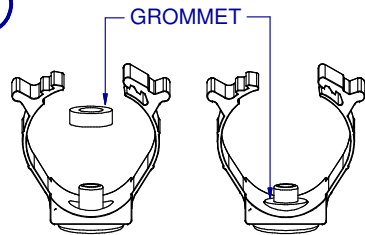

GROMMET

INSTALL THE GROMMET ONTO THE SADDLE

②

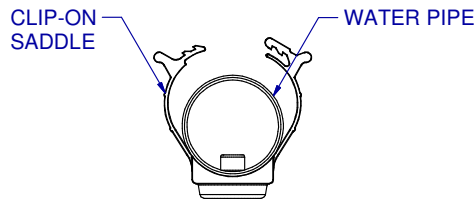


CLIP-ON SADDLE


WATER PIPE

POSITION CLIP-ON SADDLE ONTO WATER PIPE

③

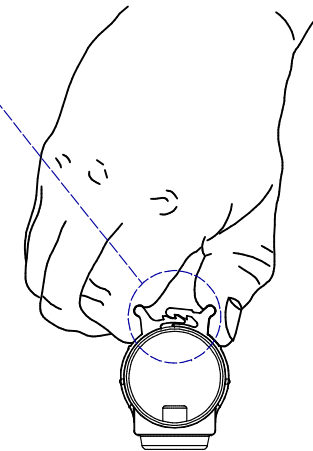

SQUEEZE CLIP INTO ITS FIRST SNAP POSITION USING FINGERS AS SHOWN  
**NOTE: STEP 4 ON NEXT PAGE**

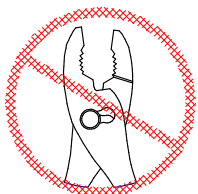

**WARNING: DO NOT USE ADJUSTABLE PLIERS OR CHANNEL LOCKS!**



INSTALLATION INSTRUCTIONS: CLIP-ON & ADAPTER SADDLES PAGE 1 OF 2

PART NR.:

DATE: 07-27-18

REVISION: 1

GL1079

USE PN 3817 OR VISE-GRIP PLIER "11R" TO COMPLETE STEP 4 OF THE INSTALLATION.

SCALE: 40%


④



CENTER PN 3817 ON THE CLIP ON SADDLE AS SHOWN


PN 3817

USE PN 3817 TO SQUEEZE THE CLIP UNTIL THE SECOND SNAP IS ENGAGED

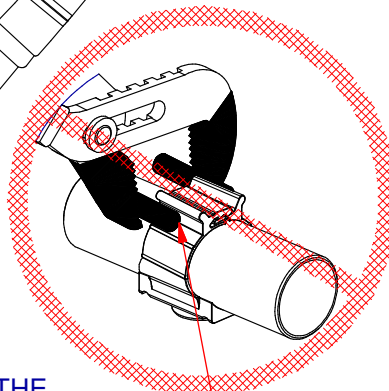


DO NOT OFFSET THE TOOL TO ONE SIDE. THIS WILL CAUSE DAMAGE AND PRODUCT TO FAIL

④

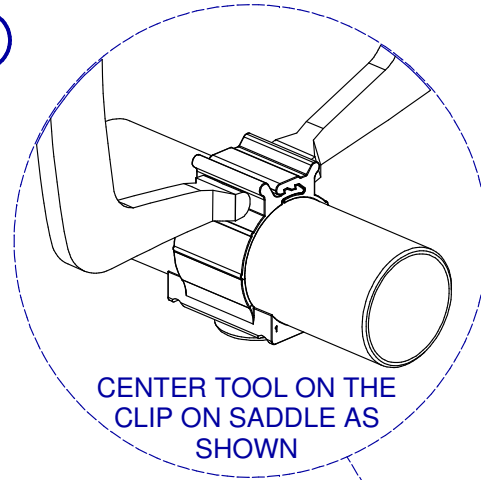


CENTER TOOL ON THE CLIP ON SADDLE AS SHOWN

VICE-GRIP 11R

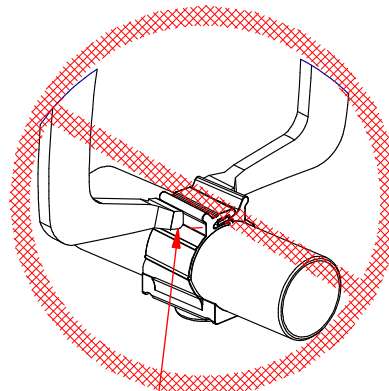

DO NOT OFFSET THE TOOL TO ONE SIDE. THIS WILL CAUSE DAMAGE AND PRODUCT TO FAIL

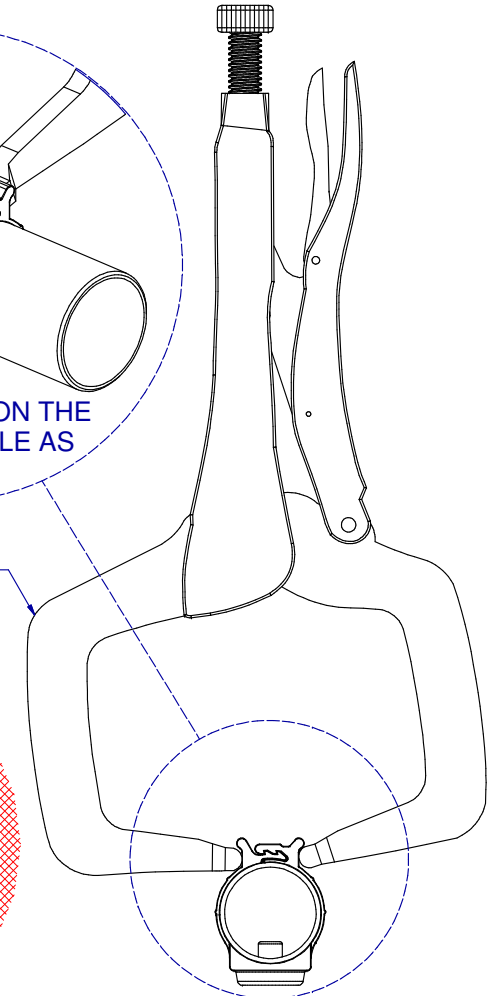

USE LARGE VICE-GRIP PLIER CLAMP (11R SHOWN) TO SQUEEZE THE CLIP UNTIL THE SECOND SNAP IS ENGAGED



INSTALLATION INSTRUCTIONS: CLIP-ON & ADAPTER  
SADDLES PAGE 2 OF 2

DATE: 07-27-18

REVISION: 1

PART NR.:

GL1079