

FLOOR SYSTEM PIPE GAP TOOL



SCALE: 50%

USE AS FOLLOWS:

- STEP 1. IDENTIFY THE **TYPE OF PIPE SECTION** TO BE CHECKED. **(A)**
 STEP 2. DETERMINE THE **NUMBER OF SADDLES** PER PIPE SECTION. **(B)**
 STEP 3. USE THE SIDE OF THE TOOL THAT APPLIES, **ACE, BIG ACE OR BIG Z**, AND **POSITION THE TOOL** AS SHOWN BELOW. **(C)**
 STEP 4. **USE THE MARK, (D)**, THAT CORRESPONDS WITH THE NUMBER OF SADDLES OF THE PIPE SECTION BEING CHECKED.
 STEP 5. WITH THE TOOL IN THE PROPER POSITION, **THE LEFT EDGE OF THE FIRST SADDLE** ON THE PIPE SECTION SHOULD FALL WITHIN THE SADDLE **MARK. (E)**

PLEASE NOTE THE FOLLOWING:

- VERY IMPORTANT:** DO THE PROCEDURE ON BOTH SIDES OF THE DRINKER LINE ON THE **SAME PIPE SECTIONS**. ONCE MOVING AWAY FROM THE REGULATOR AND THEN ONCE TOWARDS THE REGULATOR.
- BIG ACE AND BIG Z ARE ON THE SAME SIDE OF THE **TOOL** - SIMPLY TURN RIGHT SIDE UP FOR THE TYPE OF PIPE SECTION BEING CHECKED.
- ACE AND BIG ACE PIPE SECTIONS WORK WITH EITHER **TWIN OR SINGLE LOCK SADDLES**.
- WORKS FOR **BLACK BIG Z PIPES** WITH WELD-ON BIG Z SADDLES. THIS TOOL **CANNOT BE USED FOR ZIGGITY MANUFACTURED PVC PIPE WITH BIG Z CLIP-ON, EXTENDED OR FLEX SADDLES**.

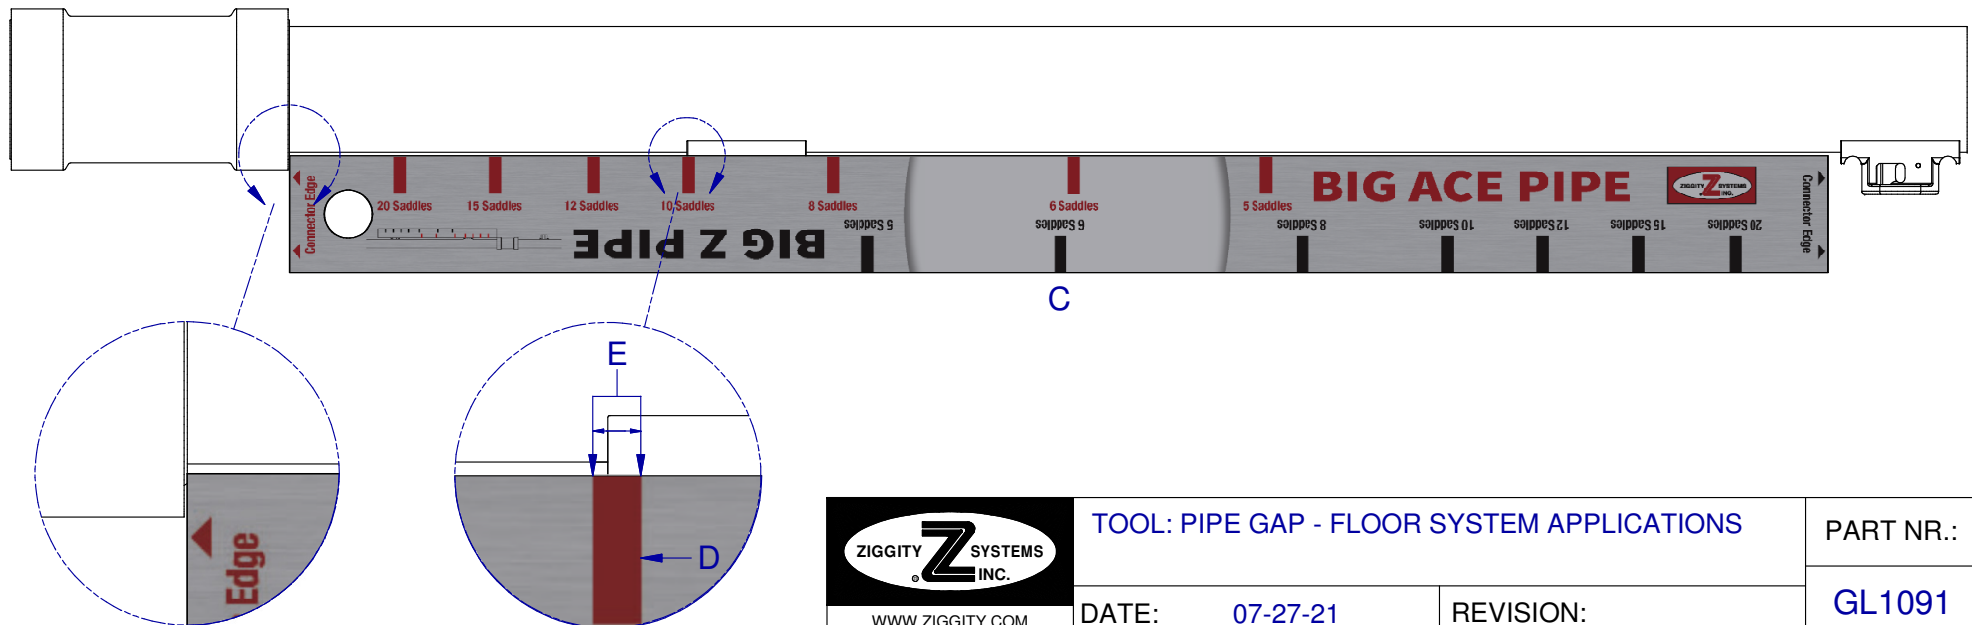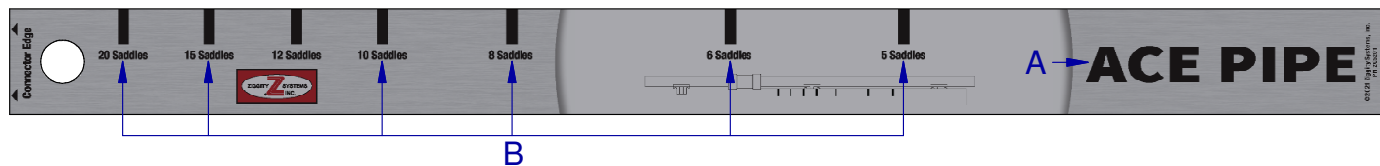

TOOL: PIPE GAP - FLOOR SYSTEM APPLICATIONS

DATE: 07-27-21

REVISION:

PART NR.:

GL1091